




# Video Alignment Cable: CAB000157

## Video Alignment Cable: CAB000157

The following information explains the correct use of the Video Alignment Cable CAB000157. With this cable an installer can temporarily view video on a monitor while they are physically close to the camera in order to facilitate the aiming of the camera. The Video Alignment Cable CAB000157 must be removed after the camera aiming is completed.

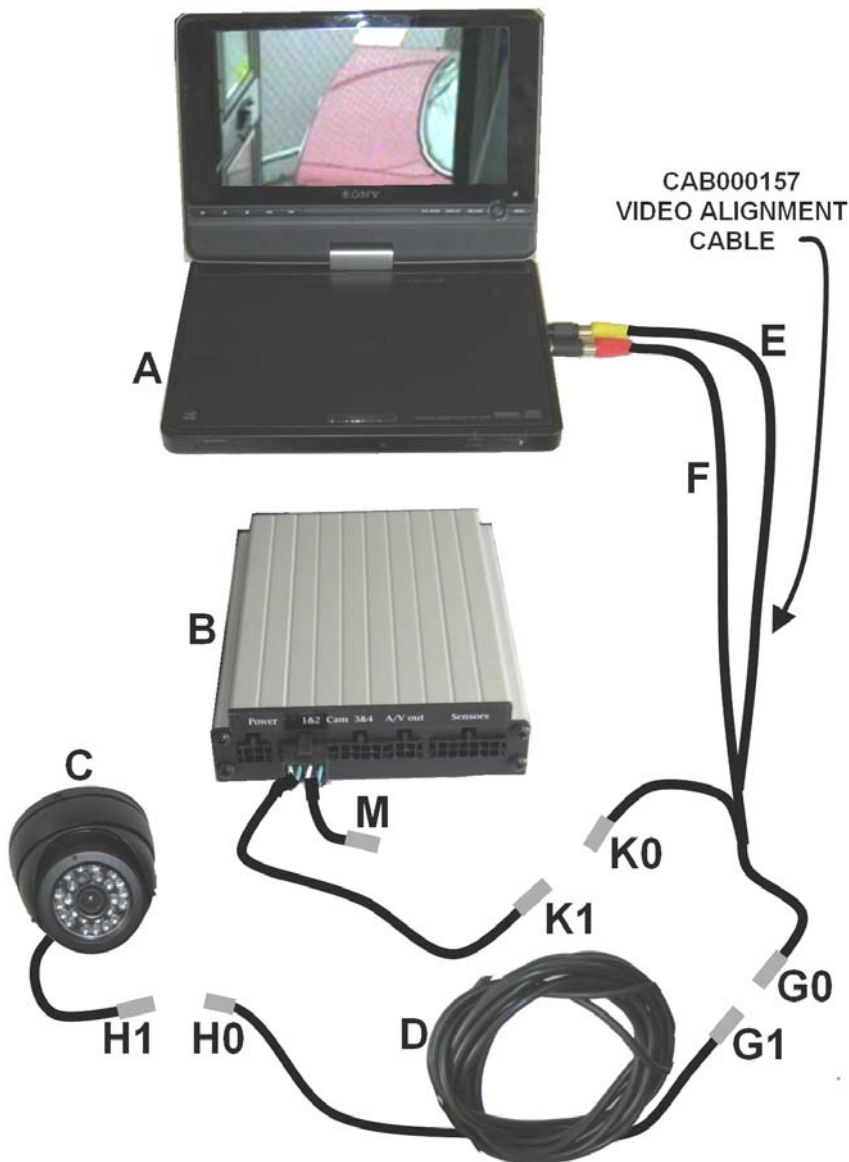



### Video Alignment Cable Connection Descriptions.

**A:** Portable LCD or DVD

**B:** NiTRO™ or NiTRO-X™

**C:** Camera

**D:** GSWHC2N-XX Camera Harness, 15'; 30' or 60' lengths.

**E:** Yellow RCA Video Output to Video Input on Portable LCD or DVD Player.

**F:** Red RCA Audio Output to Audio Input on Portable LCD or DVD Player.

**G0:** 4 Pin Female connector on CAB000157 connects to **G1** 4 Pin Male connector on Camera Harness (D).

**H0** 4 Pin Male Connector connects to **H1** 4 Pin Female Connector on Camera Harness (D)

**K0** 4 Pin Male Connector on CAB000157 Connects to **K1** CAB000202 (Dual Channel) or CAB000209 (Single Channel) Camera Adapter Harness.

**Please Note:** On a multi-camera system using CAB000202 **K0** should be connected to each additional **K1** Camera Adapter Harness, e.g. CH02; CH03 and/or CH04 to ensure complete alignment of all connected cameras.

**M:** Camera Adapter Harness (CAB000202) systems only Connect **K0** to align and adjust additional cameras.

An installed, fully functional, powered up NiTRO™ or NiTRO-X™ is required when using CAB000157, Video Alignment Cable. When using the Video Alignment Cable CAB000157 there are only four connections to make, one of which, the Audio connection, is optional.

If you look at the Video Alignment Cable you will see that there are three cables coming from one end of the Video Alignment Cable and a single cable coming from the other end.

### 3 Cables.

Yellow Video RCA for connection to the LCD or DVD players Video Input connection. This is the connection which will display the image being captured by the camera which is currently being aligned.

Red Audio RCA for connection to the LCD or DVD players audio input. This connection is optional.

A four pin male connector which connects to CAB000202 or CAB000209 Camera Adapter harness connected to the rear of the NiTRO™ or NiTRO-X™

### Single Cable.

The single cable coming from the other end of the Video Alignment Cable is a 4 pin female connector which connects to the harness of an installed camera.

Once these connections are made, alignment of the camera can be completed.

